
## Remote control

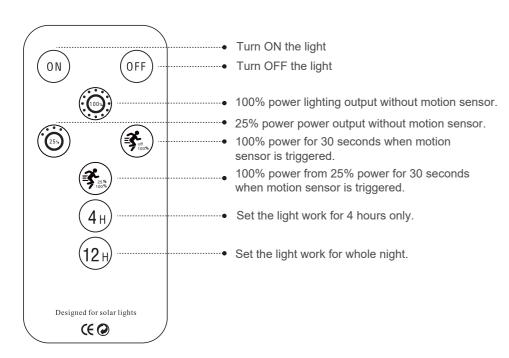

# Regular Trouble Shot

PROBLEM	REASON	HOW TO SOLVE
Light is off  Short working time	Switch is off	Turn on the on/off switch of light
	No direct sunshine	Move the light to the direct sunny area
	Continuous cloudy or rainy days	Light will back to work when sun returns
	There is debris on solar panel	Clean the solar panel
	Location problem	Move the light to the area with direct sunshine
	Continuous cloudy or rainy days	Light will be recharged when sun returns
	Battery life is expired	Replace with a new battery

# Committed to a better world with quality gree By combining the best technology of lithium batteries, solar panel, led and advanced control systems we offer the most reliable and high-efficienc By BSCI BARREY DARREY DA

# **USER MANUAL** of Solar Wall Light



This solar wall light offers a futuristic design for public space outdoor lighting applications where the benefits of IK10 vandal resistance are required. LifePO4 battery combined with an intelligent lighting program provides 100% power up to 280lm. The mission of solar bollard light is to comply with the requirement of the Dark Sky Association by limiting the upward light waste ratio (UWLR) to <1%. Limiting upward light reduces environmental light pollution and protects the view of our night sky for all.


We also offer this solar wall light in a wildlife-friendly version retaining all the features of the original product. Wildlife-Friendly lighting is specifically designed to minimize the ecological impact on animals and insects.

#### Specifications

Solar panel	6.2Watts 5V MONO	
LiFePO4 battery	38.4WH 3.2V	
 LED power	1.5W max	
 Luminous output(Im)	280lm	
 Motion sensor type	PIR	
Color temperature	2700K~6000K	
Protection rate	IP65 IK10	
Light size	323*275*195mm	
Working program	2H 100% + 5H (30%+70%) + 4H 20% + 6H(10%+40%)	
Certificates	CE, ROHS, IP65, FCC	
 Warranty	5 years	

#### Turn ON/OFF

It is inside of the light head. Use the allen wrench to push ON/OFF.

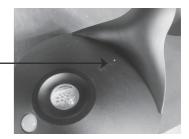

## Plate Size and Install it



# Accessories in package



The plate

1 piece





Expansion Screw 2 pieces



Small screws 2 pieces



the nut with cap 2 pieces



Allen Wrench 1 piece

#### How to install the light

- Step 1: Drill 2 holes in on wall with distance 60~65mm as the drawing shows.
- Step 2: Put 2pcs of small screws and 2pcs of big expansion screws into the plate as picture B shows. Please note the concave side should face outward.
- Step 3: Put the 2 pcs expansion screws into the holes and tighten them properly. (the two small screws **MUST** be put inside before tightening the expansion screws)
- Step 4: Put the wall light on the plate and tighten it to the plate with 2pcs of the screw cap.
- Step 5: Use the small pin to push the button to turn on the light, then the light will work automatically from dusk to dawn.