




RTL-POLESIDE-1470

2 x 195W Panel or 1 x 400W

SYSTEM OVERVIEW

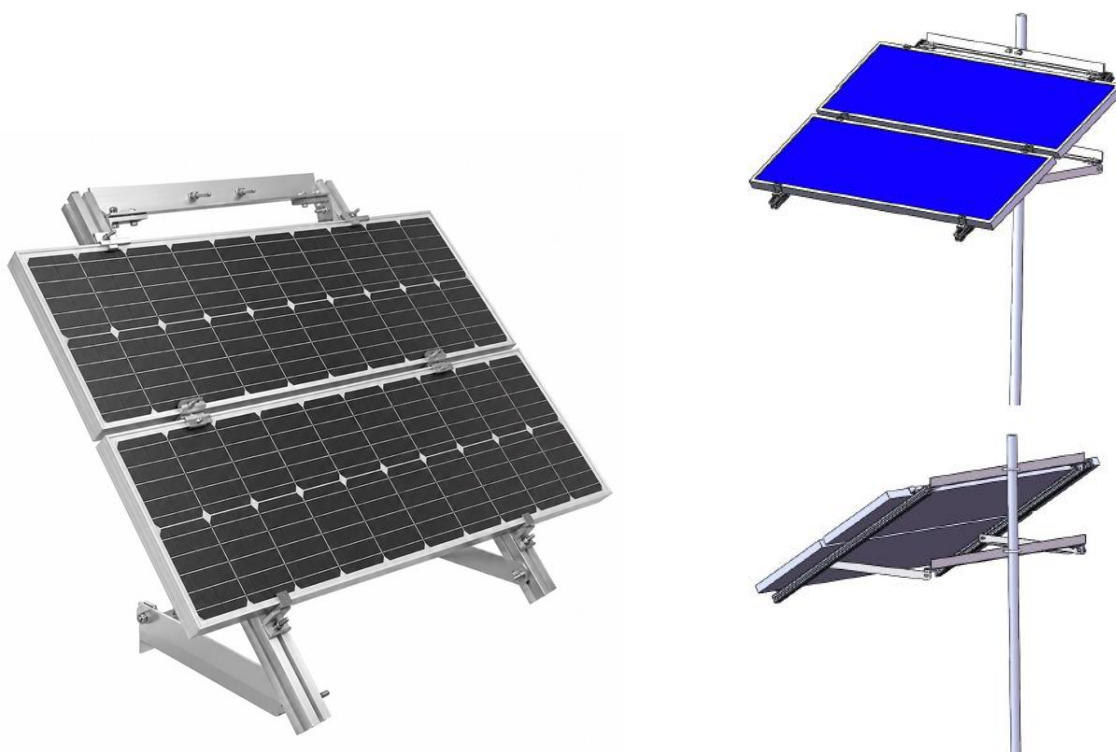

COMPONENT LIST

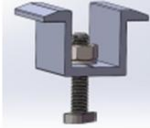SIC-EC-35		SIC-IC-35	
SIC-R4010		SIC-L8640	
SIC-L5050		SIC-FX-L	
SIC-M12-U			


RTL-POLESIDE-1470

2 x 195W Panel or 1 x 400W

Step 1: Install angle aluminum SIC-L5050


Find the correct position on drawing, then put the U bolt SIC-M12-U on the pole, then use screw to fix them.

*Do not lock it first, install the telescopic tube and adjust it and then lock it, which is easy to install

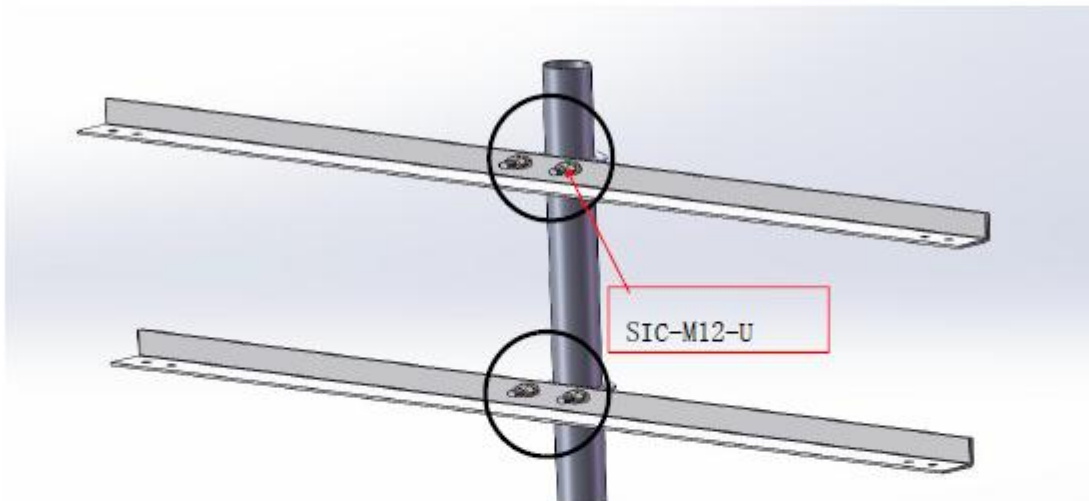

Step 2: Install L feet SIC-L8640

Use M8*25 bolt to fix L feet on both sides.

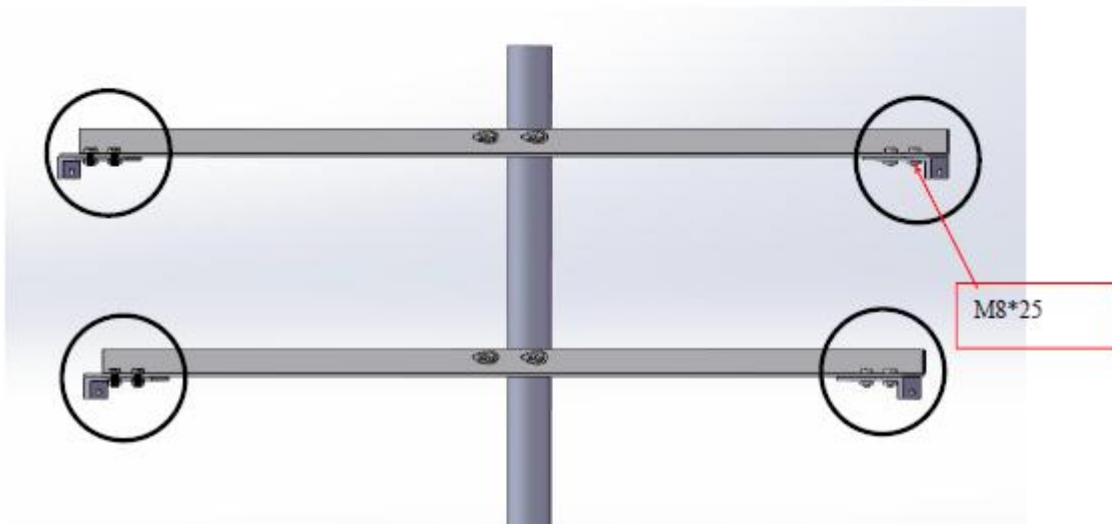


RTL-POLESIDE-1470

2 x 195W Panel or 1 x 400W

Step 3: Install Rail SIC-R4010

Fixed two rails SIC-R4010 by assembly L feet, and fixed to SIC-L5050

*Do not lock it first, install the telescopic tube and adjust it and then lock it, which is easy to install

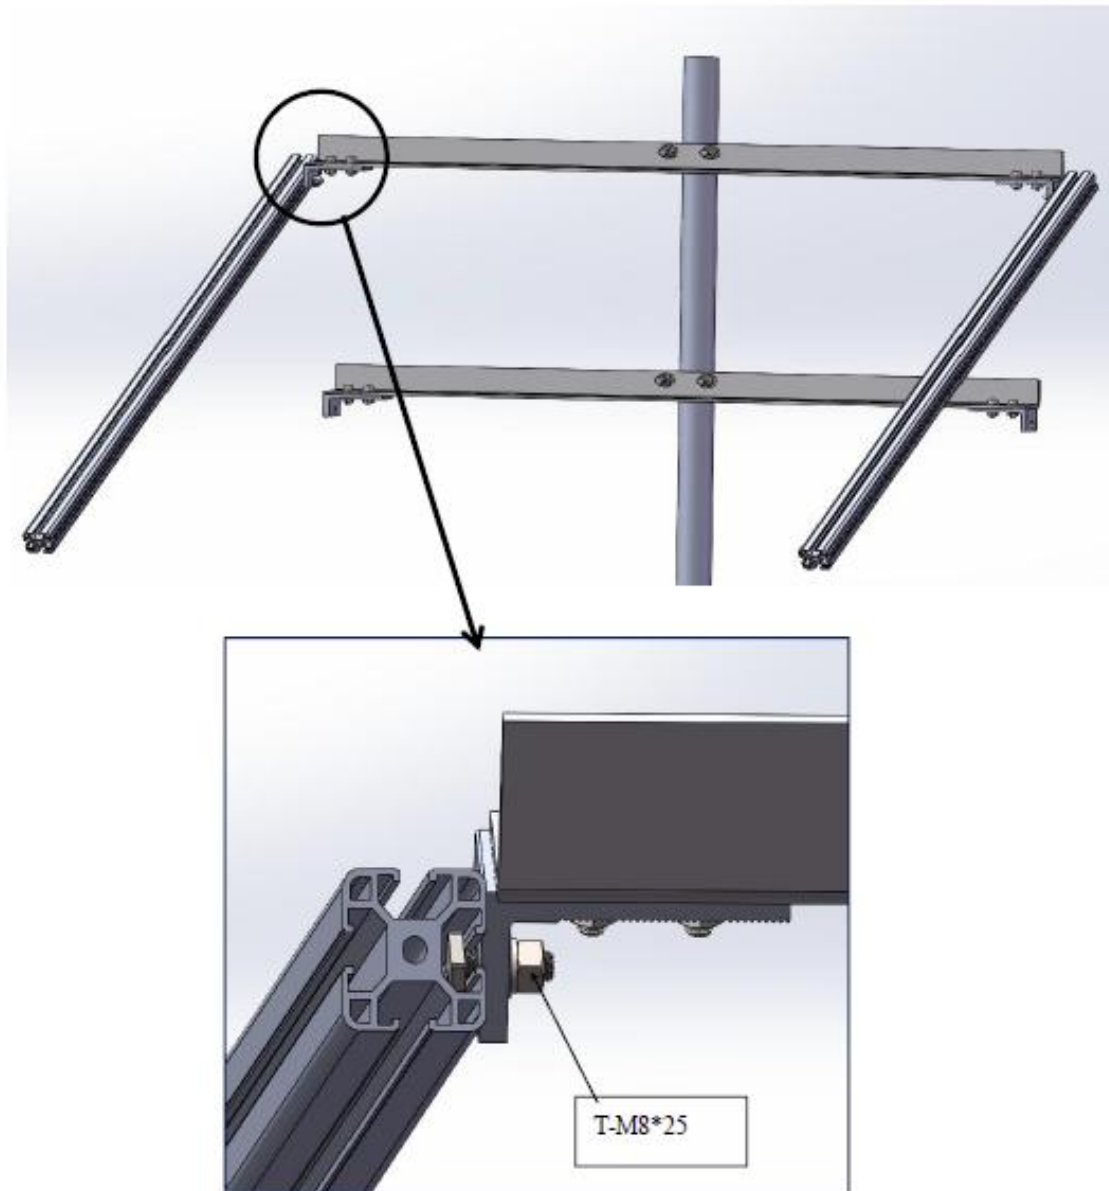


RTL-POLESIDE-1470

2 x 195W Panel or 1 x 400W

Step 4: Install Support angle aluminum SIC-FX-L

Use T bolt fixed SIC-FX-L to SIC-L8640.

Use T bolt fixed SIC-FX-L to SIC-R4010, let the SIC-FX-L and angle aluminum on the same level.

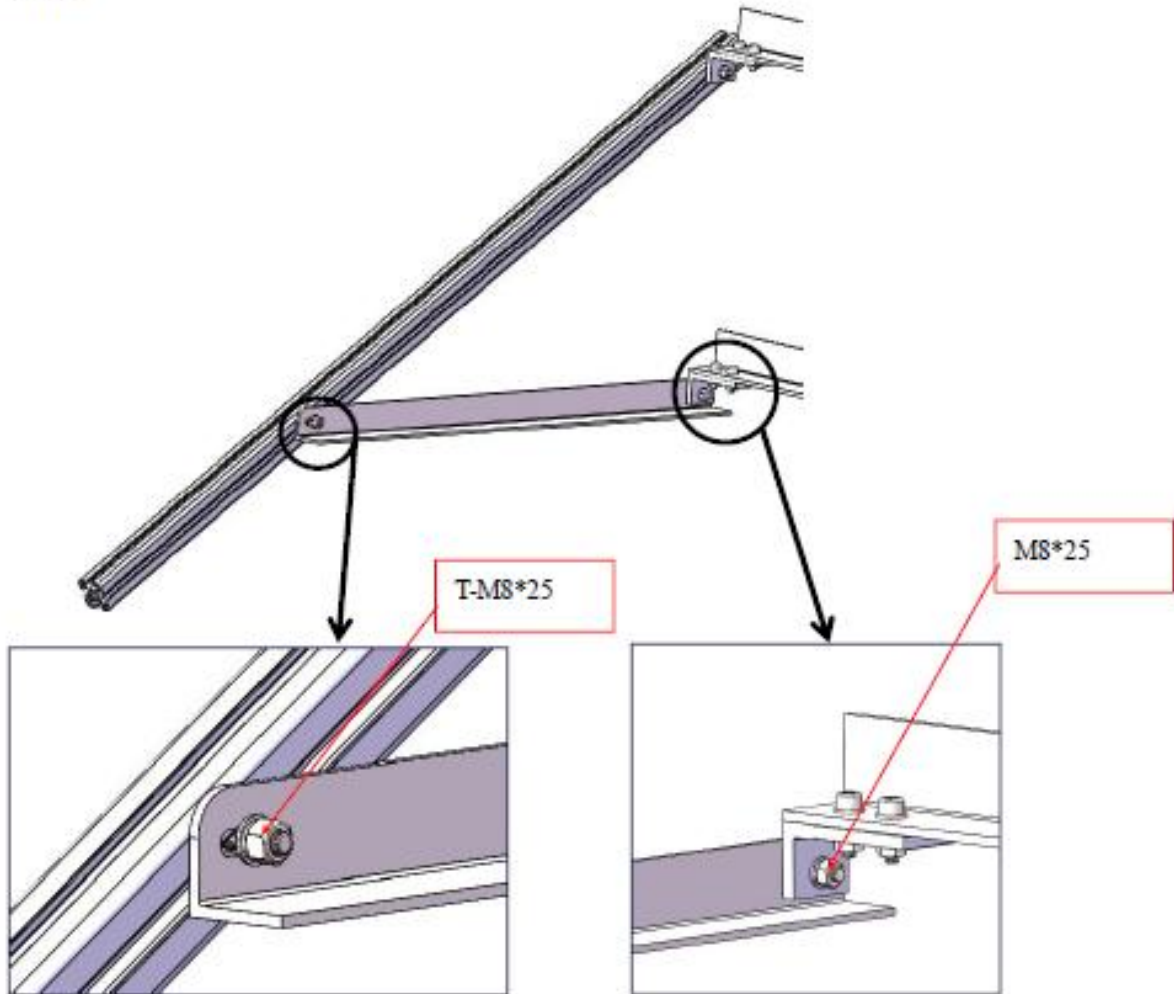


Adjust the SIC-FX-L and SIC-R401, and lock them.

RTL-POLESIDE-1470


2 x 195W Panel or 1 x 400W

Step 5: Install solar panel

Put the solar panel on rail, use mid and end clamp fixed the panel on rails.

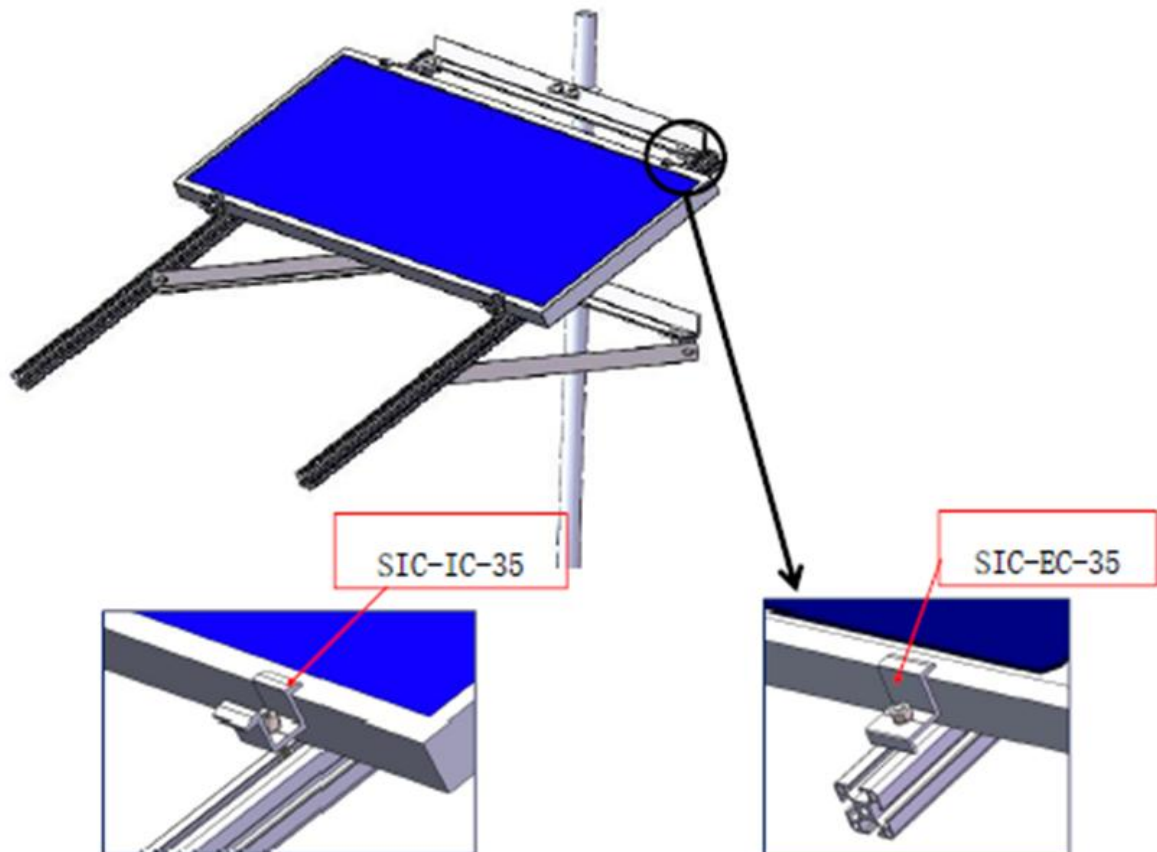

Fixed the rest panels.

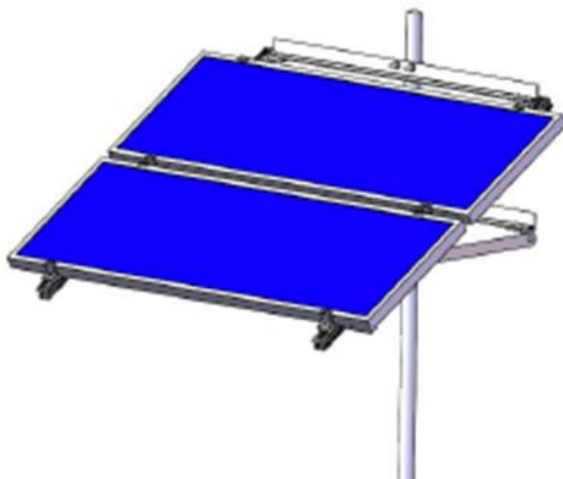

RTL-POLESIDE-1470

2 x 195W Panel or 1 x 400W

Step 6: Installation finished.

Attention: Check all bolt and nut lock perfectly.

